
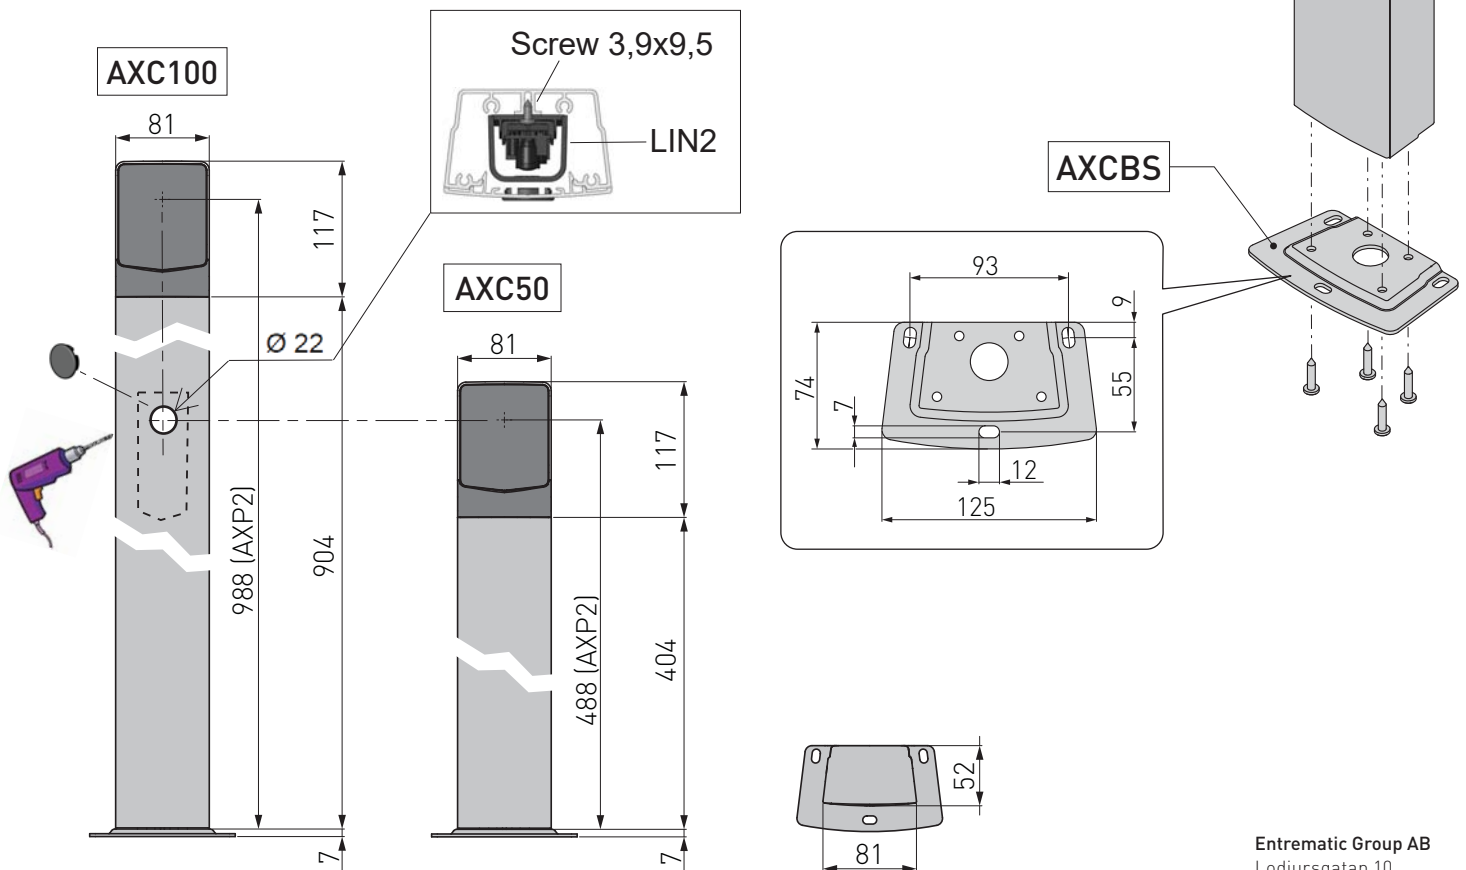


Entrematic AXC50-AXC100-AXCBS

Manuale di installazione per colonnina
Installation manual for column

IP2291 • 2018-05-30

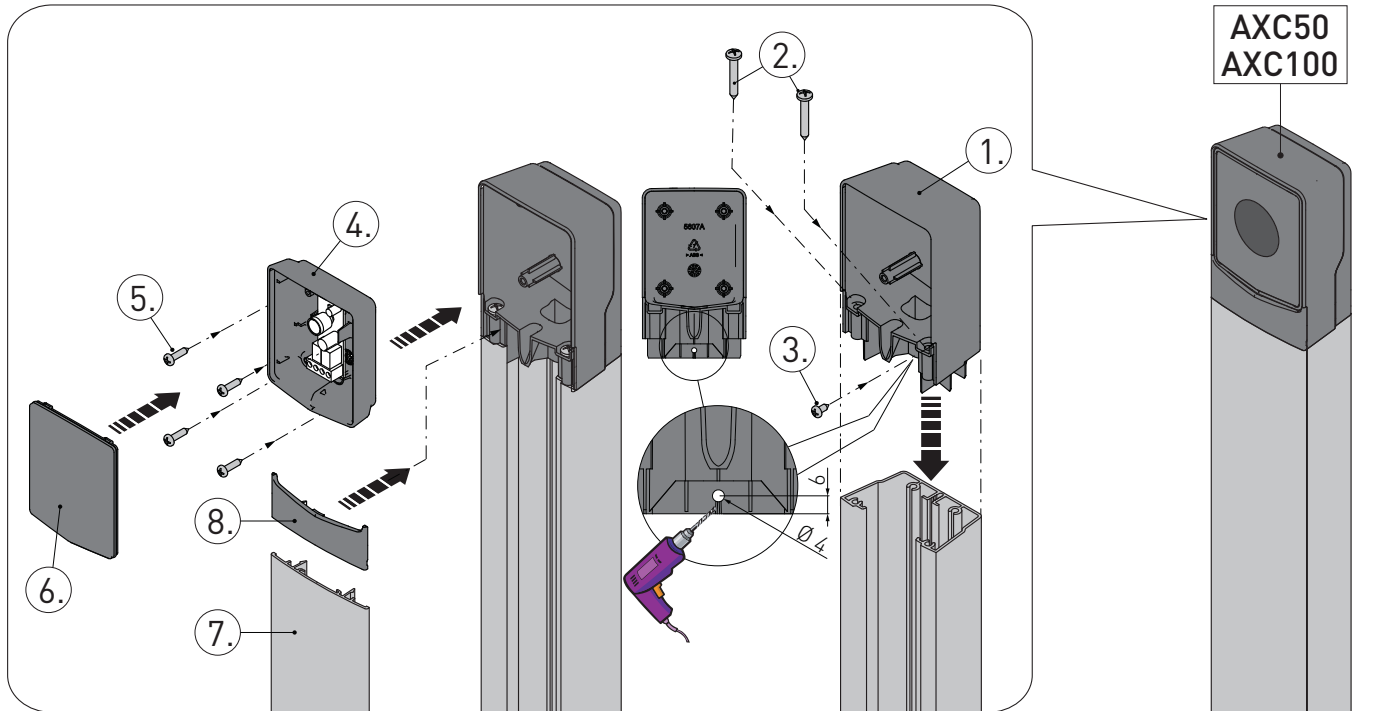

Entrematic Group AB
Lodjursgatan 10
SE-261 44, Landskrona
Sweden
www.entrematic.com