


Ditec ALU48RB0 - ALU48SB0

Istruzioni di installazione sistema di profili ALU48 con dispositivo a sfondamento delle sole ante mobili
Installation instructions for ALU48 profiles system with break-out device of the moving door wings only.


ENTRE//MATIC

IP2190 • 2014-07-17

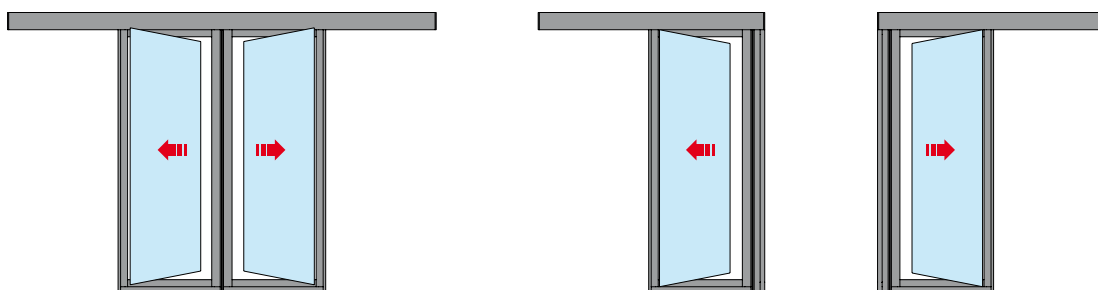



www.ditecentrematic.com

1. Instructions for placing panes on door wing


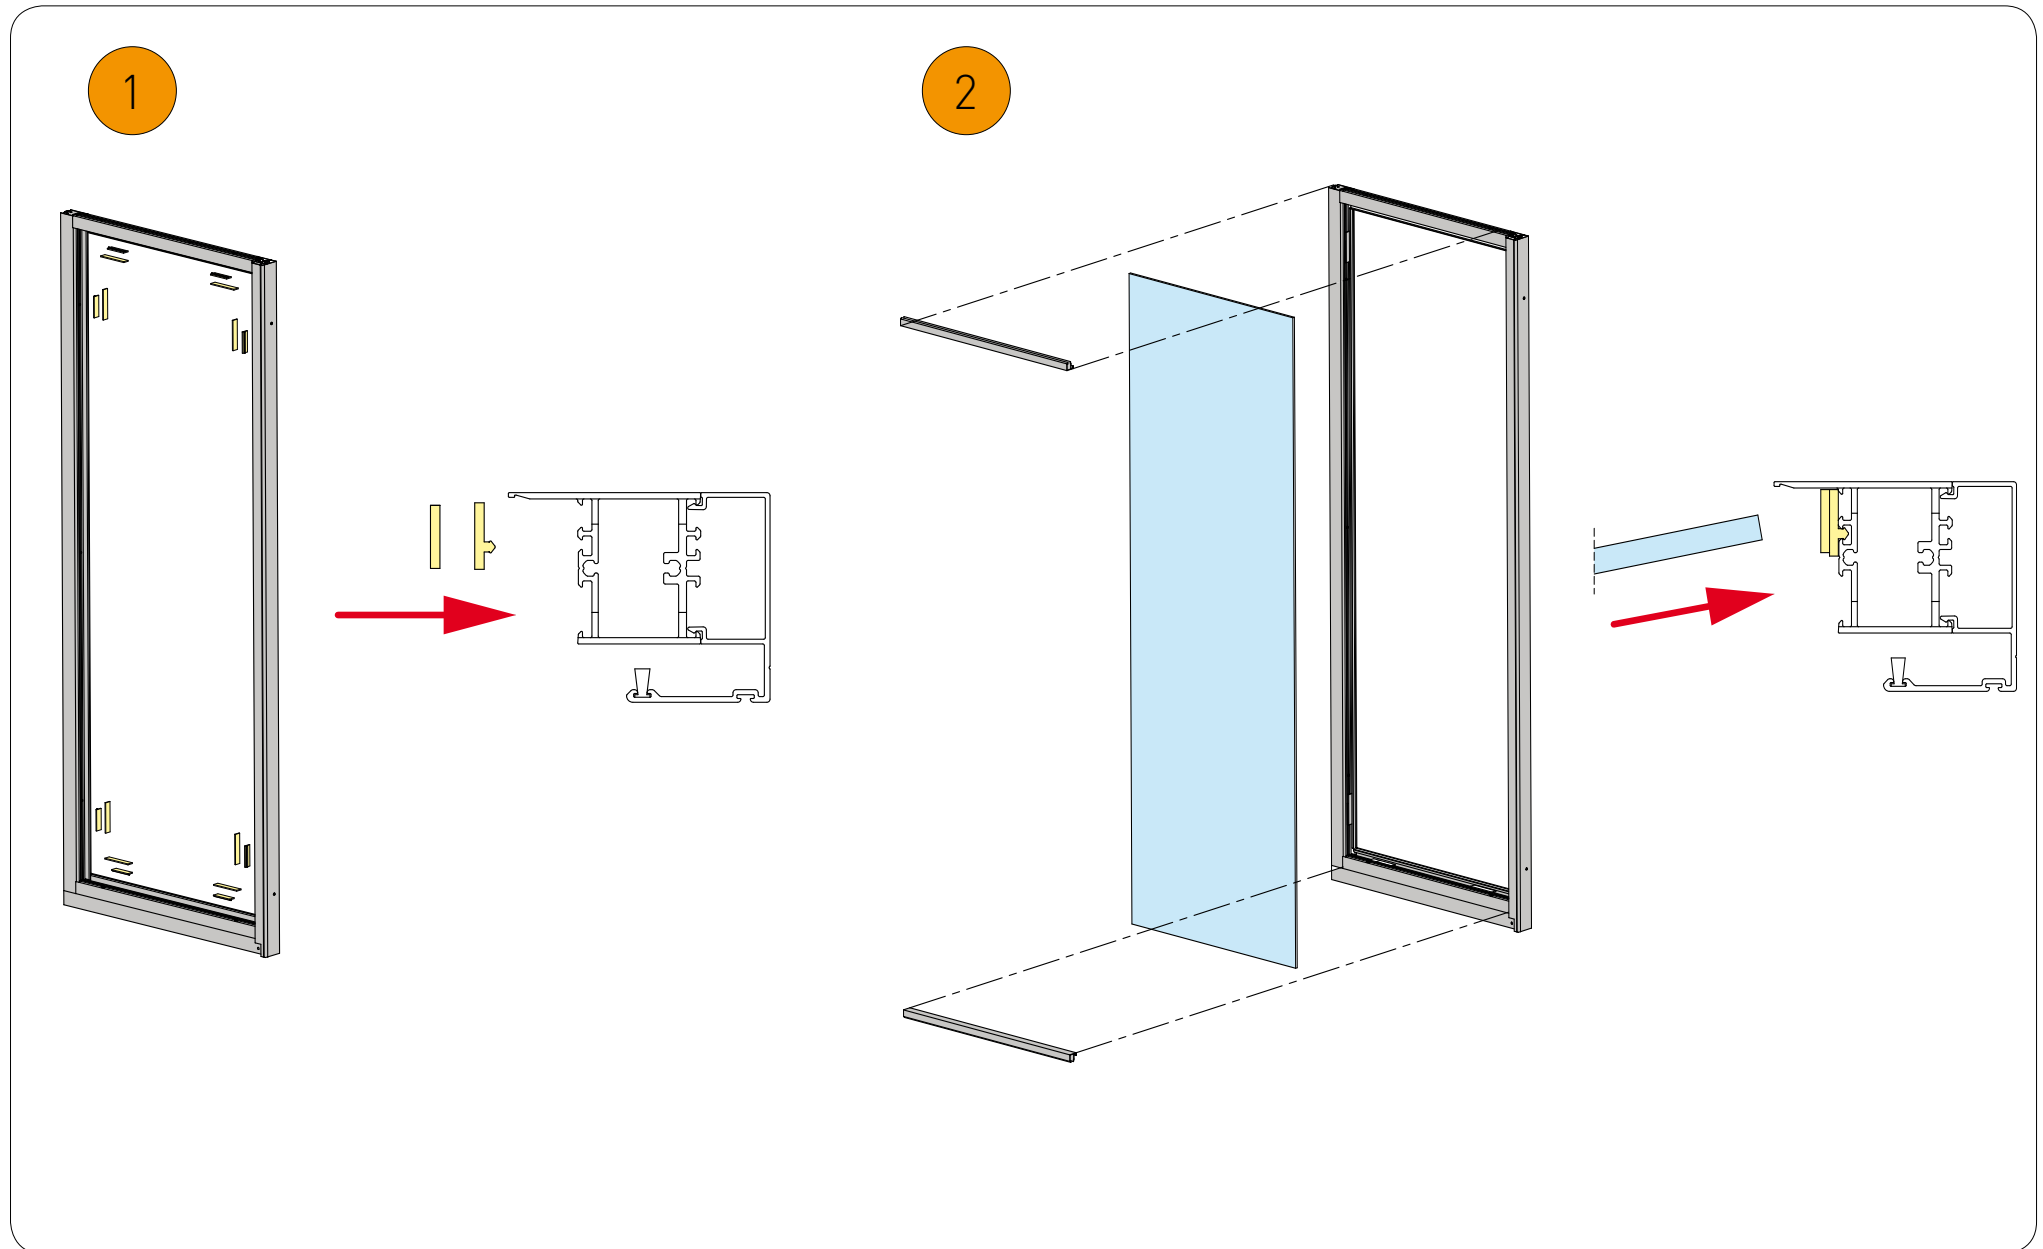


1. Instructions for placing panes on door wing

3

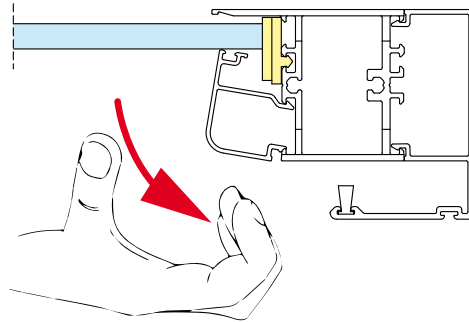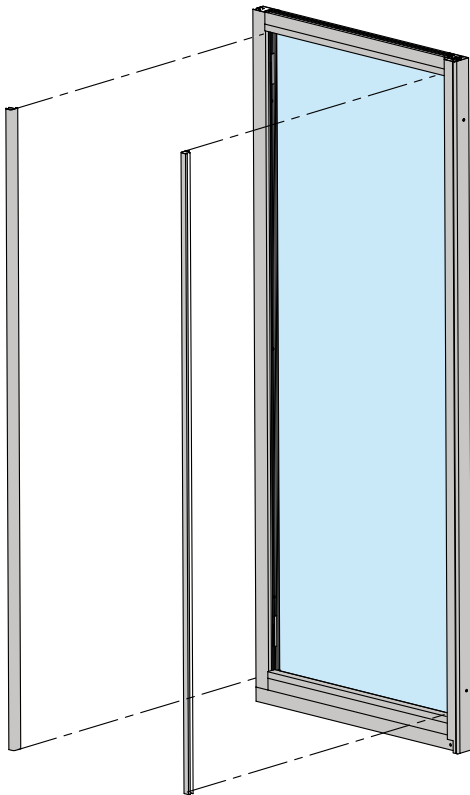


4

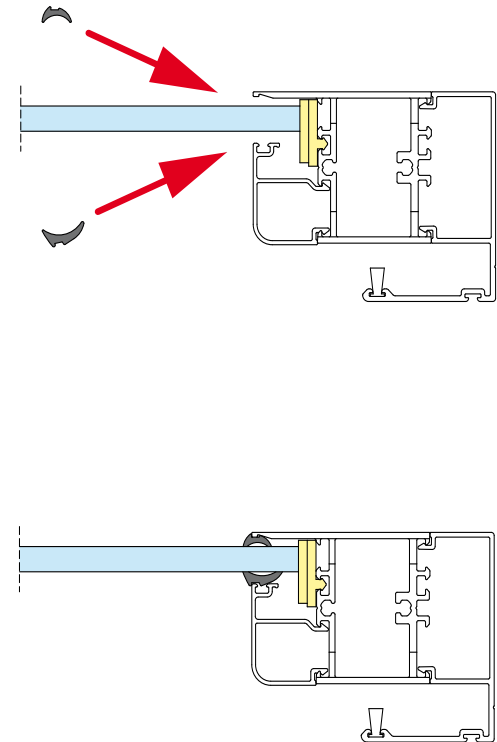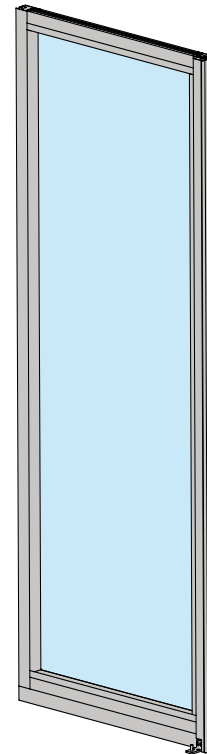


2. Installation instructions


List of equipment
Elenco dotazioni
Ausstattungsverzeichnis
Liste des accessoires fournis
Lista de suministro
Lista de equipamentos

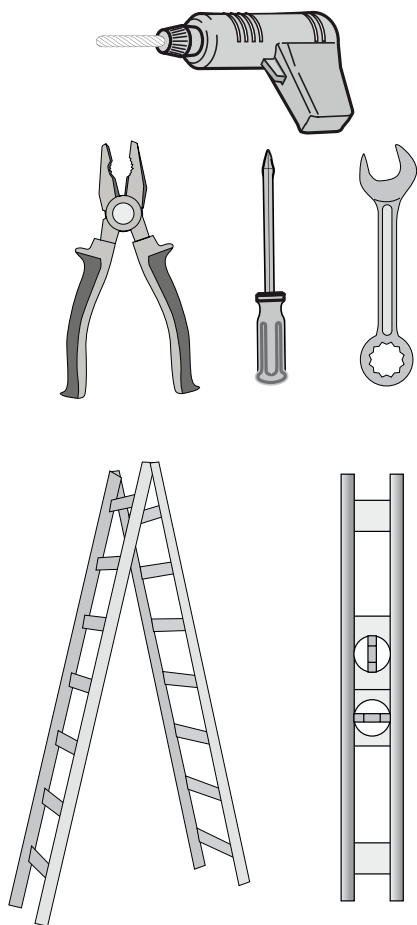


Regulation instructions
Indicazioni di regolazione
Angaben zur Einstellung
Indications de réglage
Indicaciones de regulación
Indicações de regulação

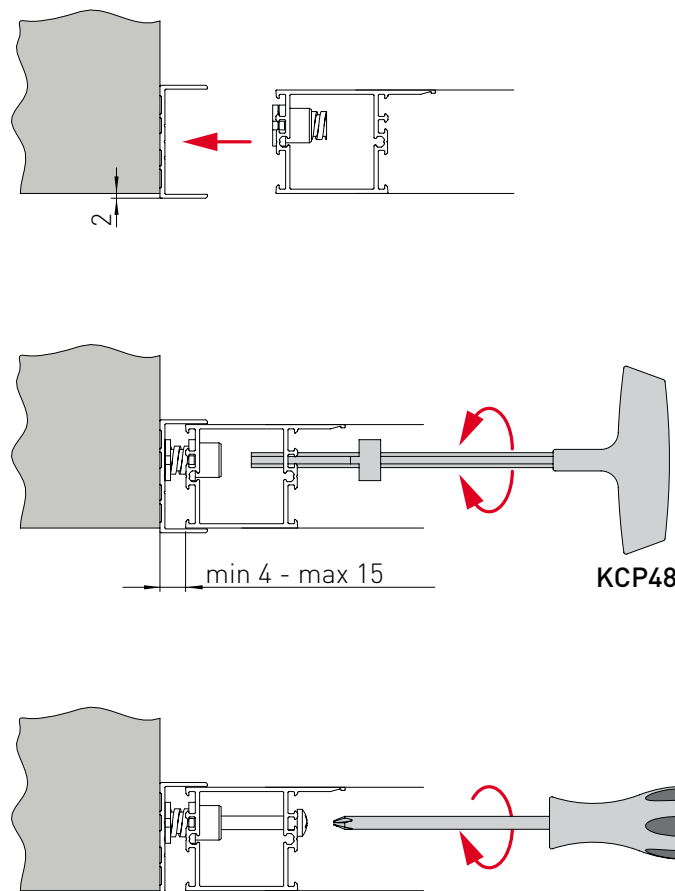


Fastening instructions
Indicazioni di fissaggio
Angaben zur Befestigung
Indications de fixation
Indicaciones de fijación
Indicações de fixação

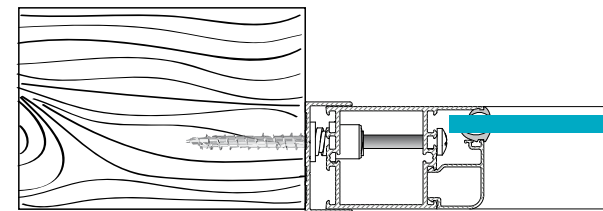

Wood - Legno - Holz
Bois - Madera - Madeira

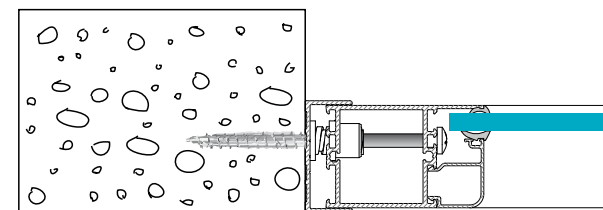


Concrete - Cemento - Zement
Ciment - Cemento - Concreto

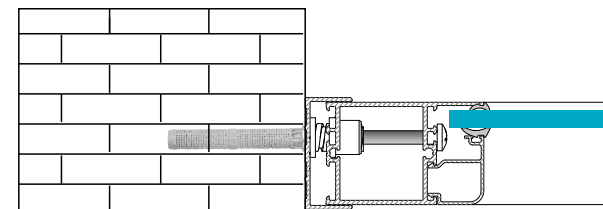


Brick - Mattone - Ziegel
Brique - Ladrillo - Tijolo

3. Installation instructions for two moving door wings RBO

- 1 Installation position
NB: check LxH dimensions

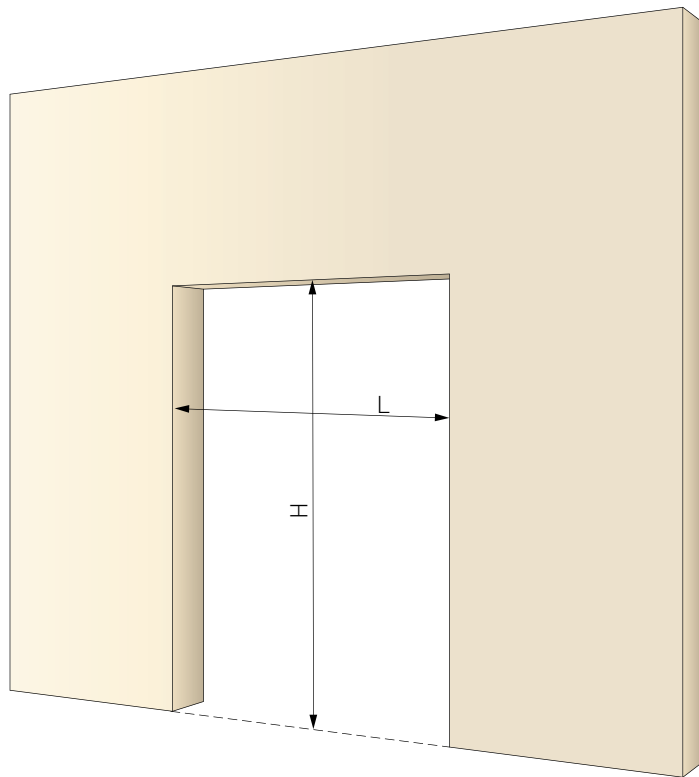


- 2 Installation of frame

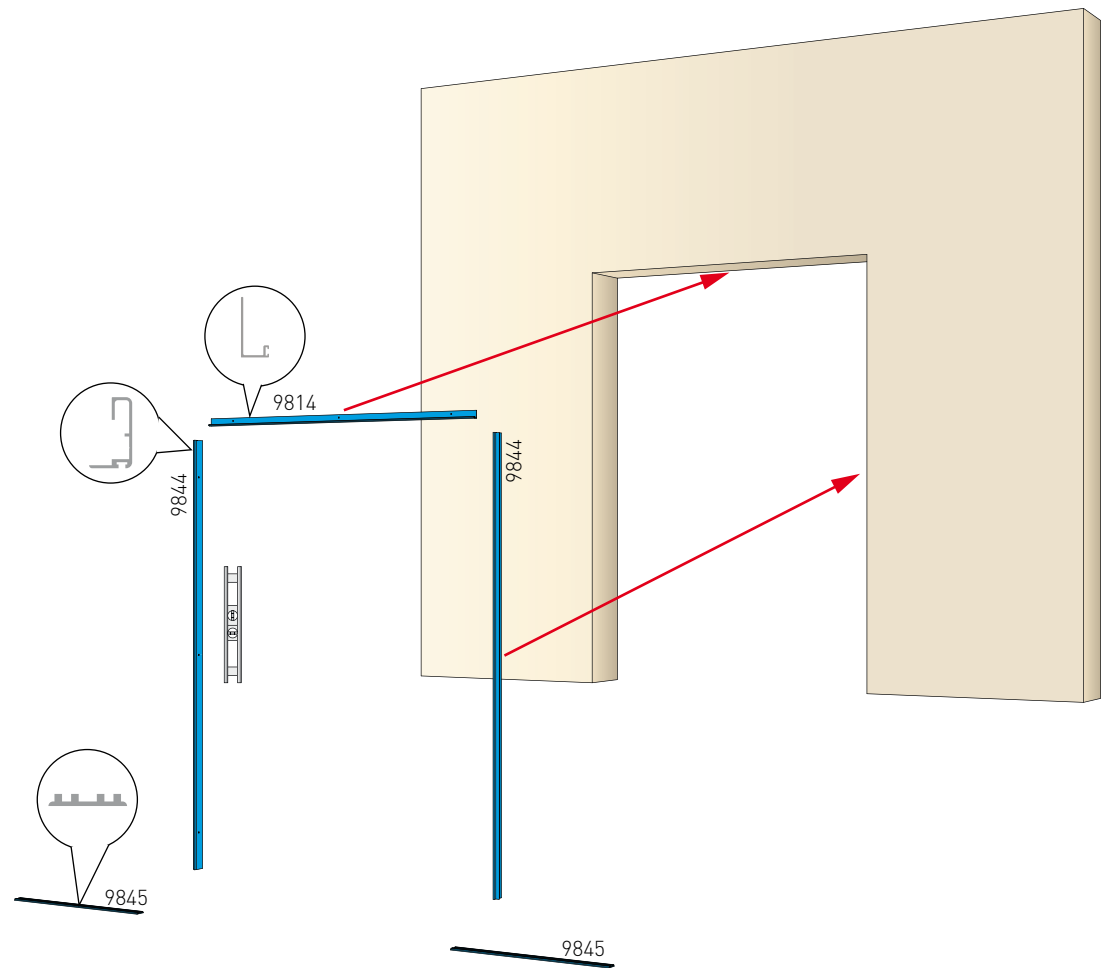

3. Installation instructions for two moving door wings RB0


3

Installation of automation

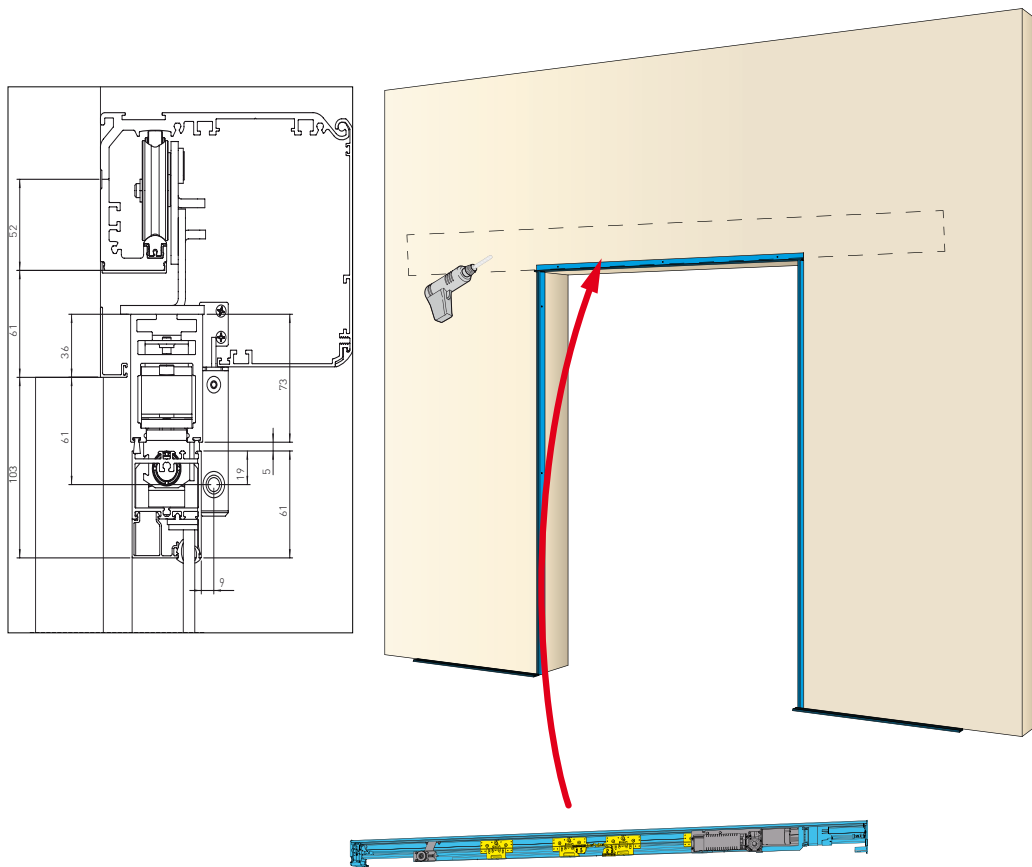


4

Door wings installation

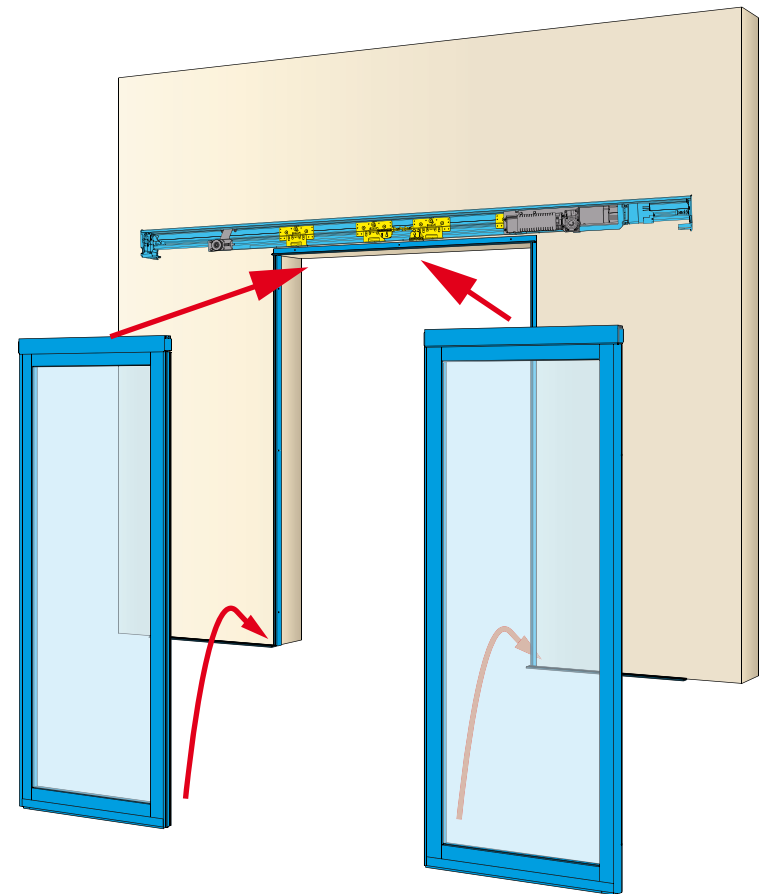


3. Installation instructions for two moving door wings RBO

5 Casing installation

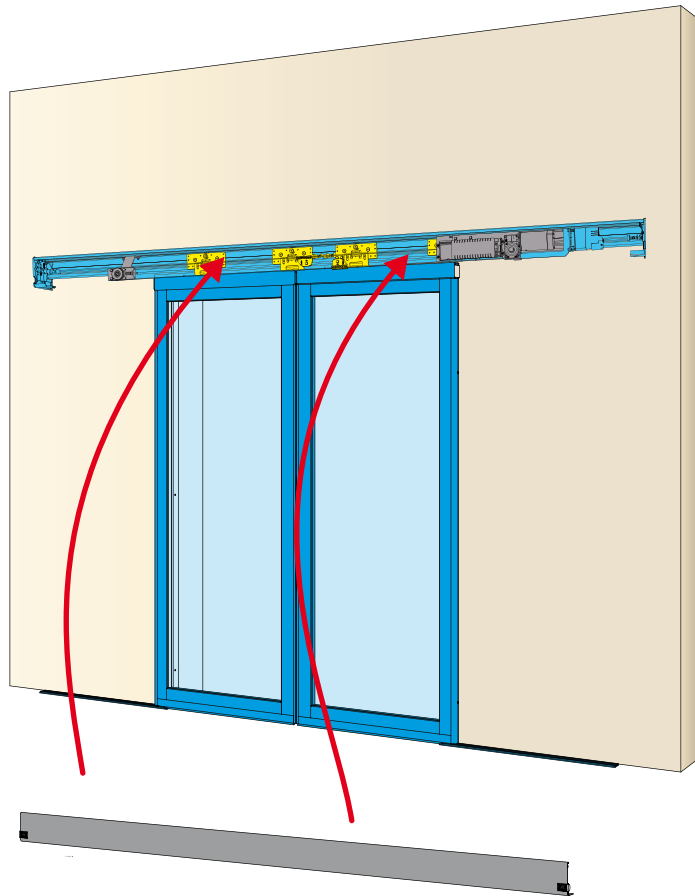


6 End of installation

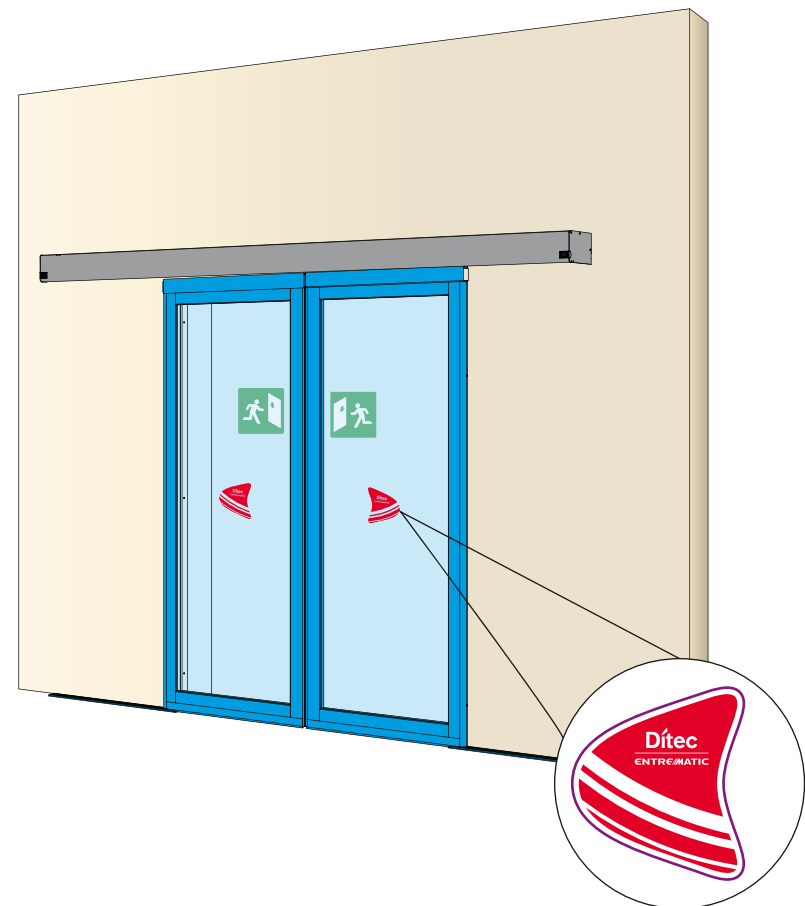


NOTE 1
see page 10

4. Installation instructions for one moving door wing RBO

- 1** Installation position
NB: check LxH dimensions

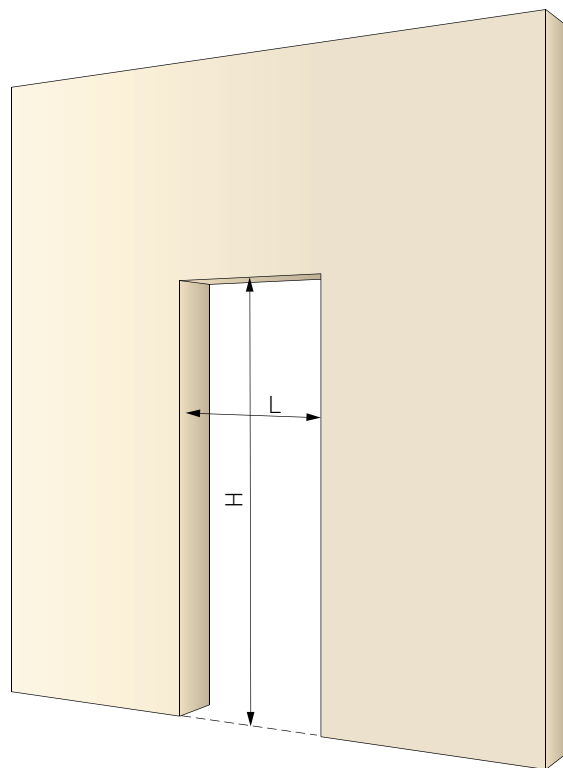


- 2** Frame installation


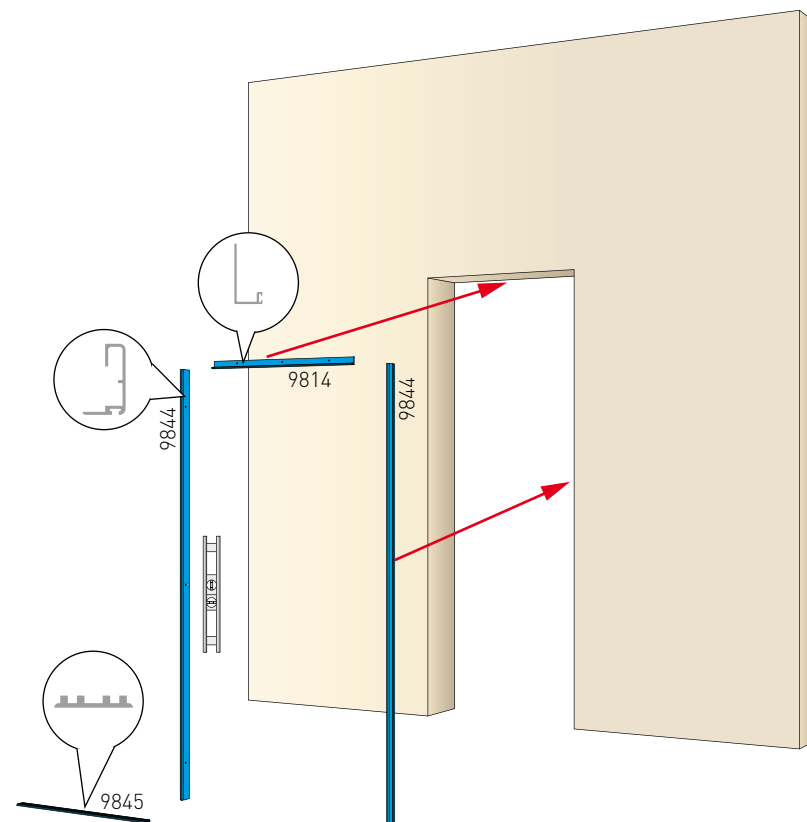


4. Installation instructions for one moving door wing RB0

3 Free passage profiles installation

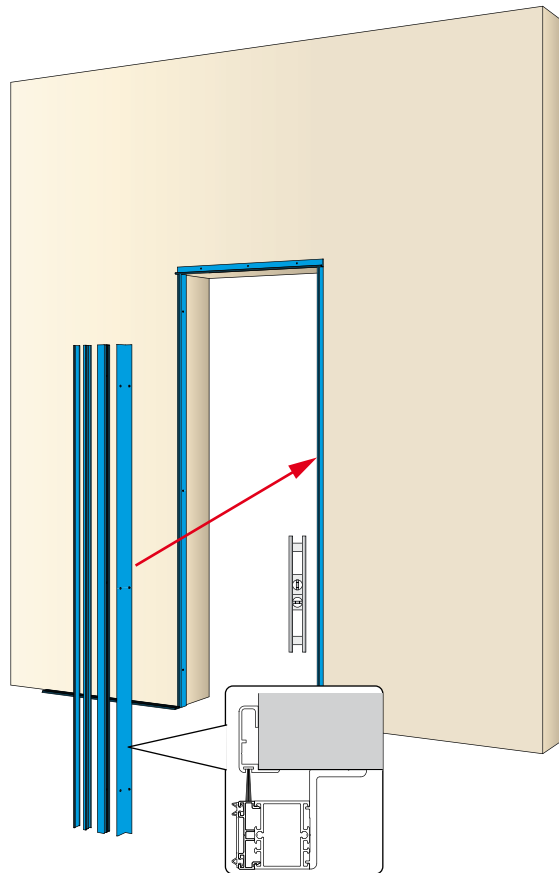


4 Installation of automation

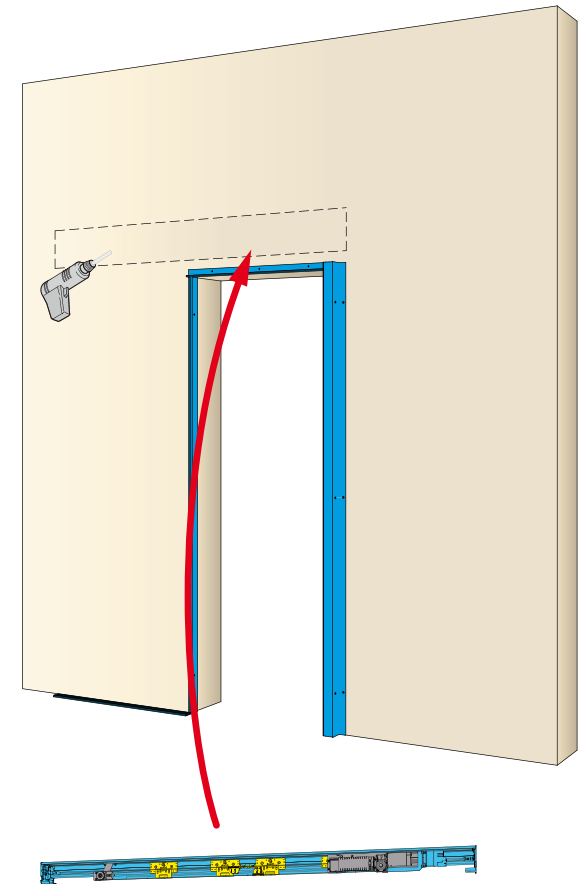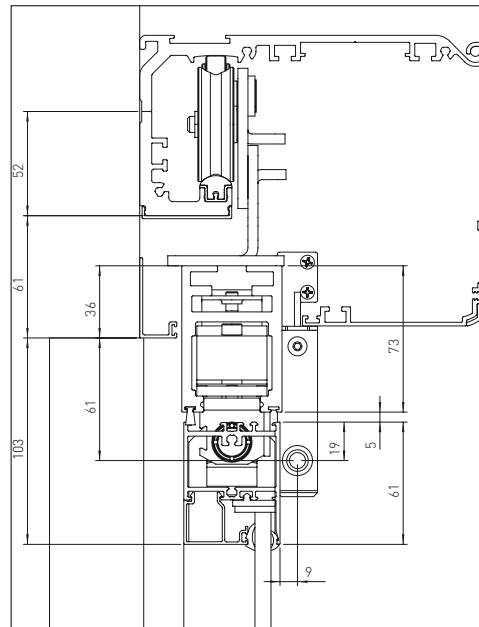


4. Installation instructions for one moving door wing RBO

5 Door wing installation

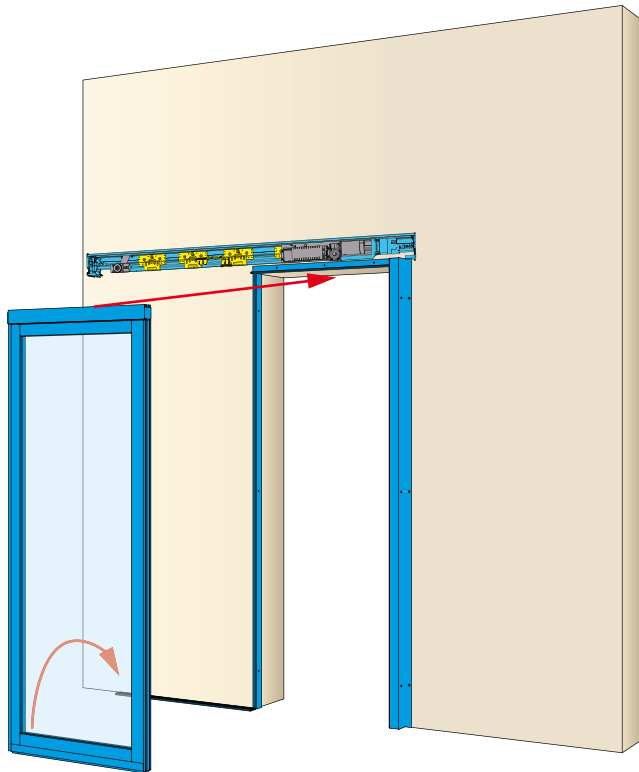


6 Casing and end installation

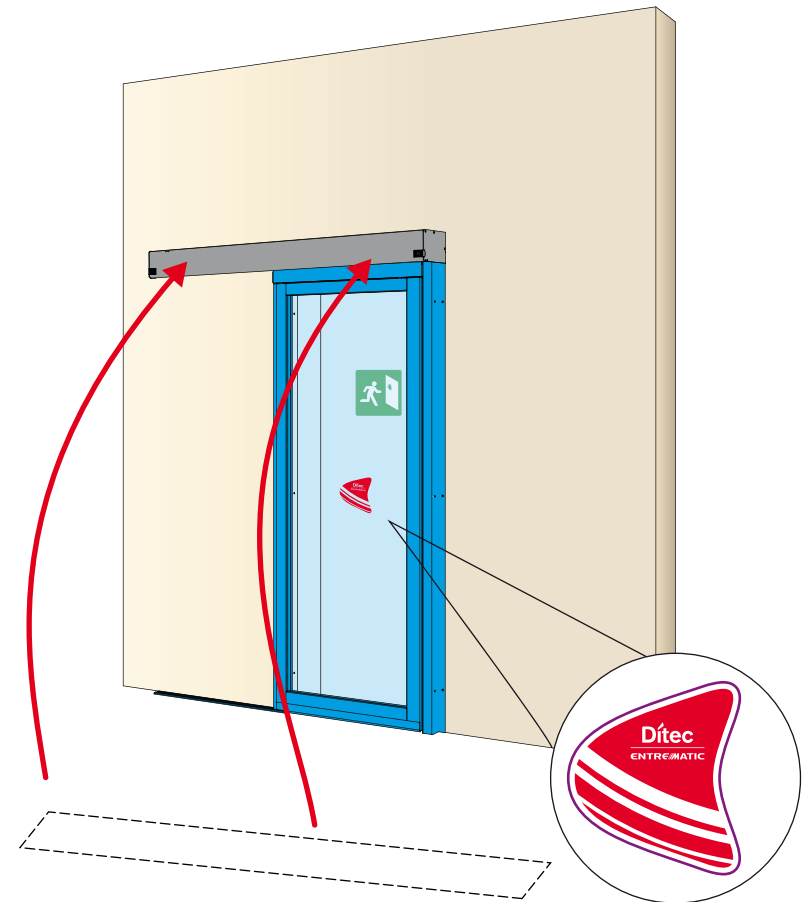


NOTE 1
see page 10

5. Installation instructions for two moving door wings SB0

- 1** Installation position
NB: check LxH dimensions

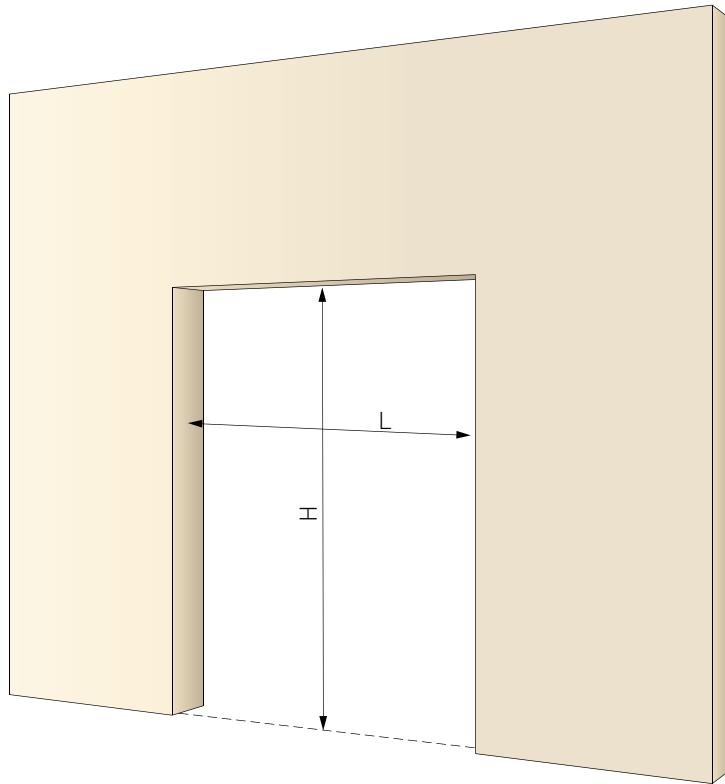


- 2** Frame installation

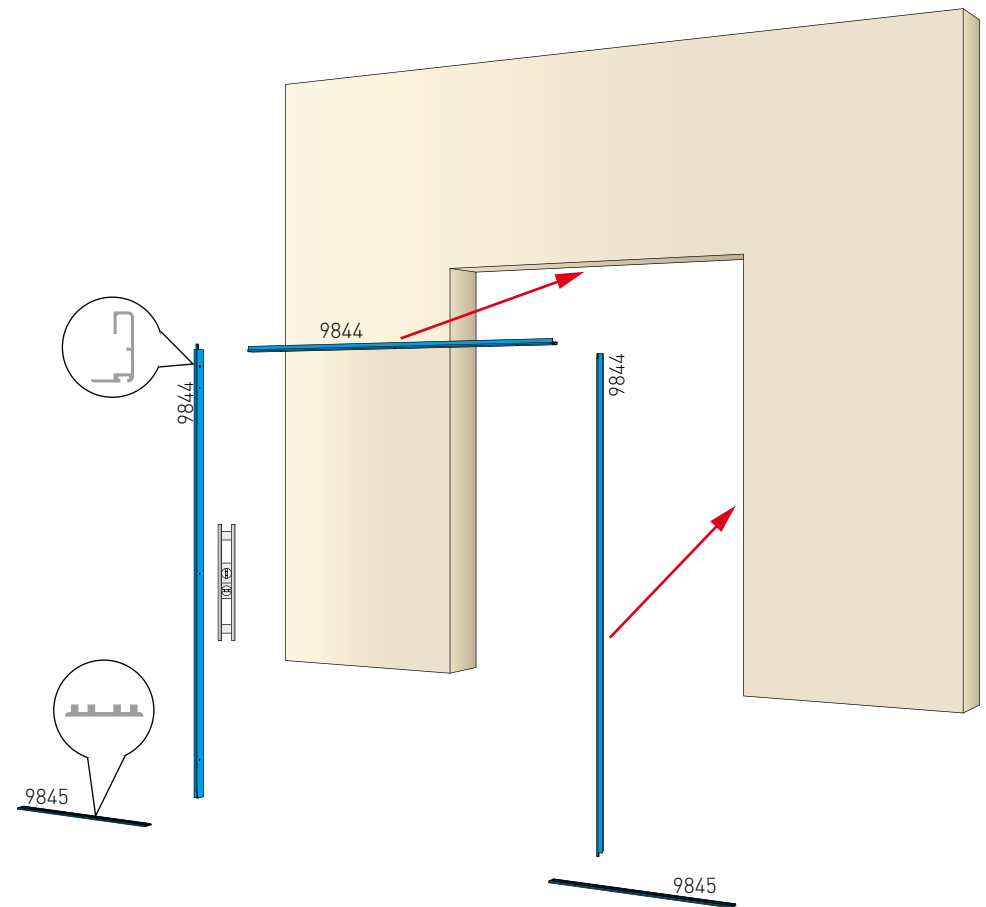


5. Installation instructions for two moving door wings SB0

3 Installation of automation

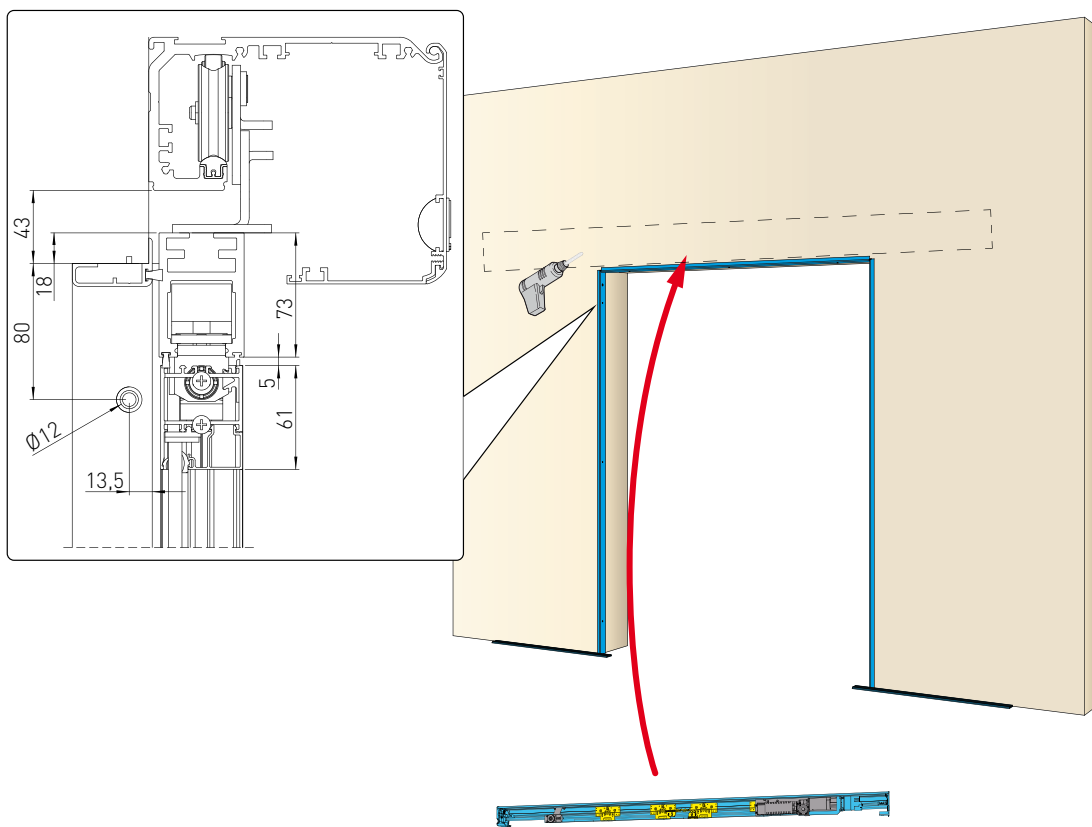


4 Door wings installation

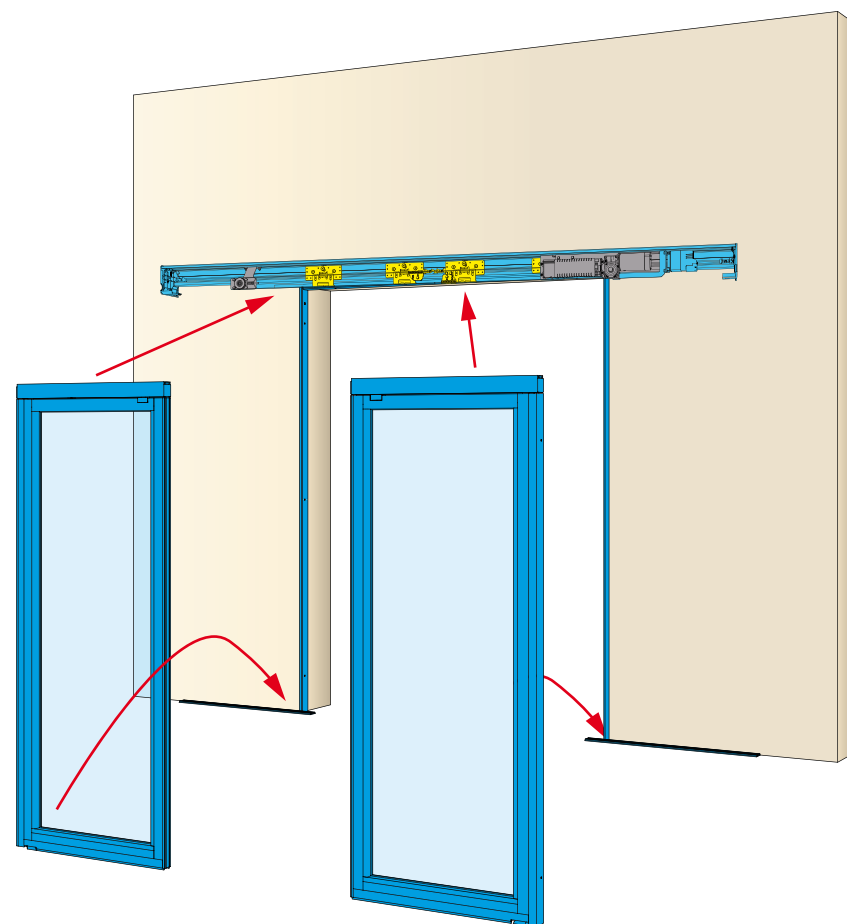


5. Installation instructions for two moving door wings SB0

5 Moving door wing regulation

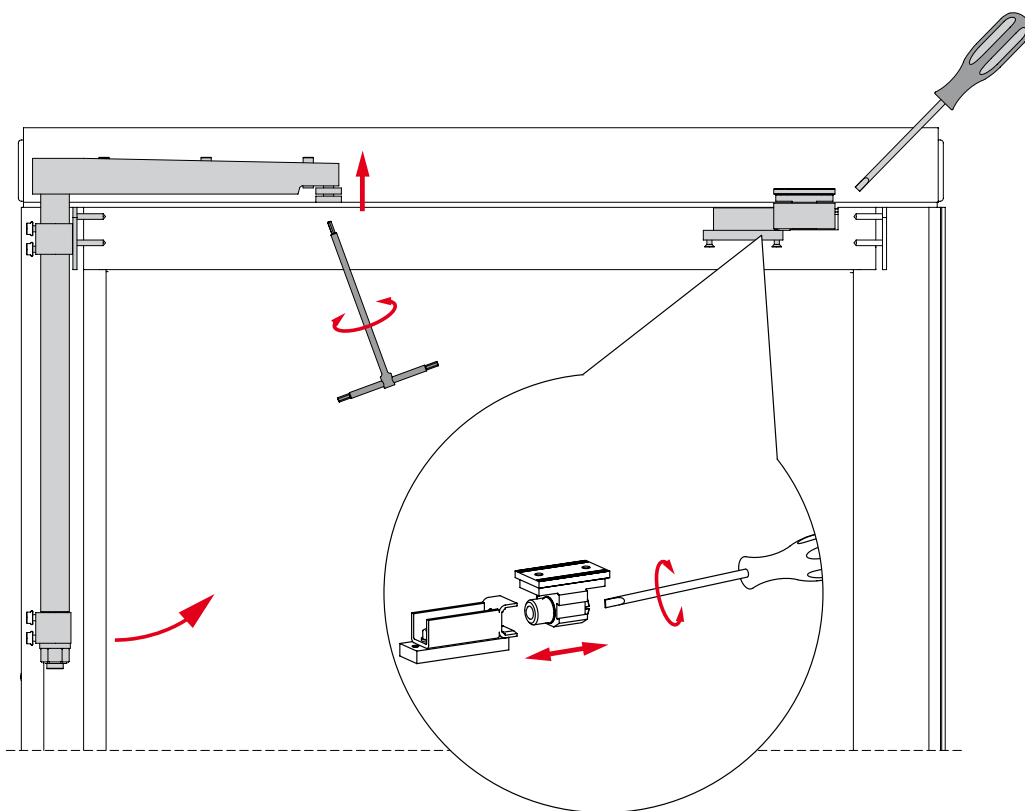


6 Casing and end of installation

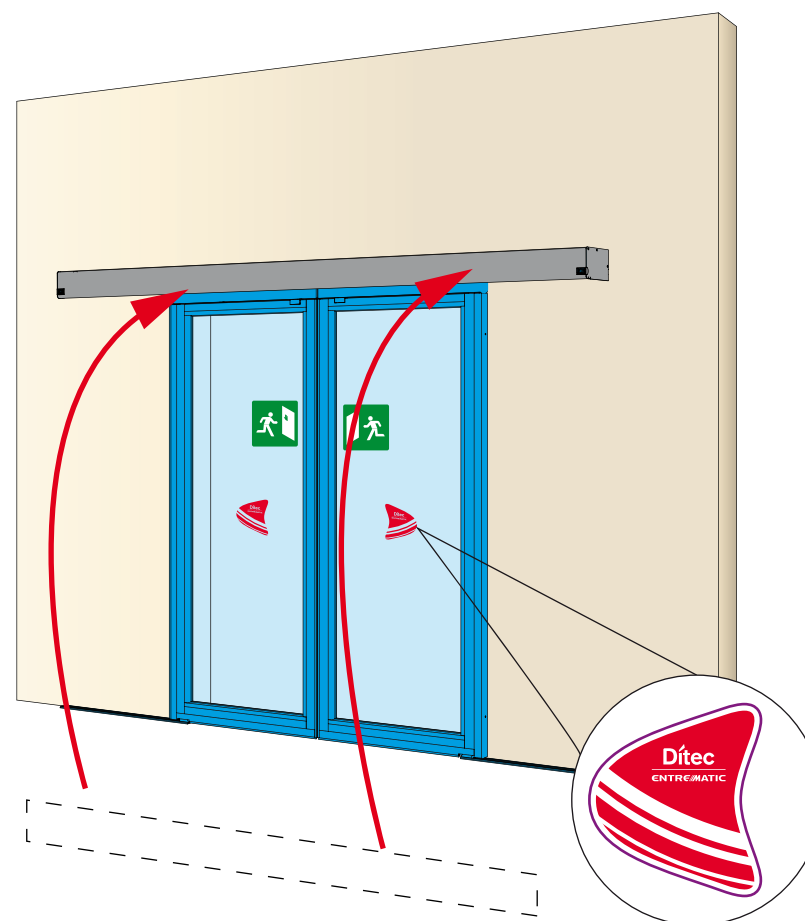


NOTE 1
see page 10

6. Installation instructions for one moving door wing SB0

- 1** Installation position
NB: check LxH dimensions

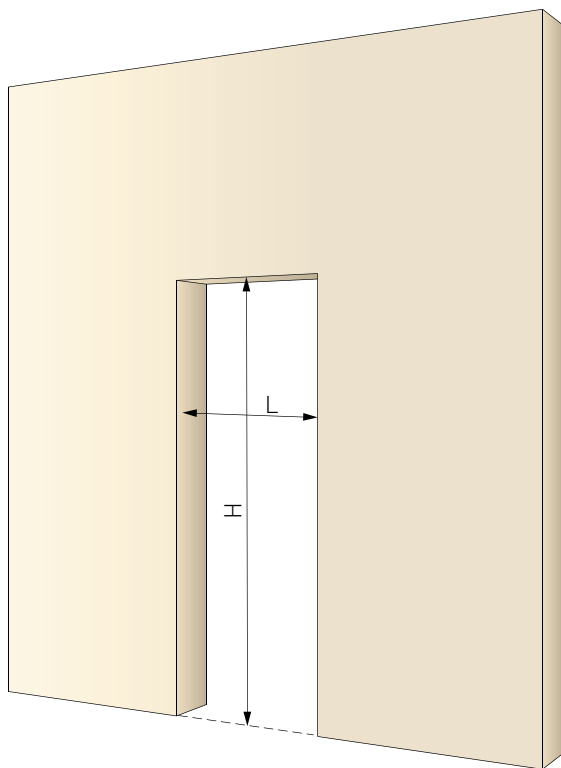


- 2** Frame installation

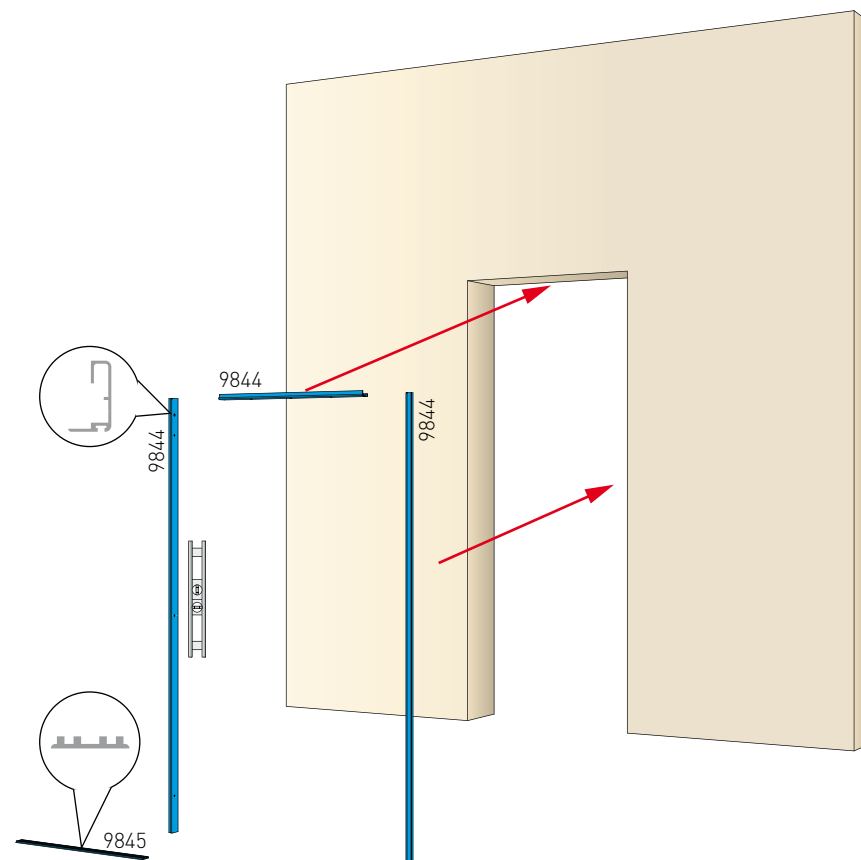

6. Installation instructions for one moving door wing SB0


3

Free passage profiles installation

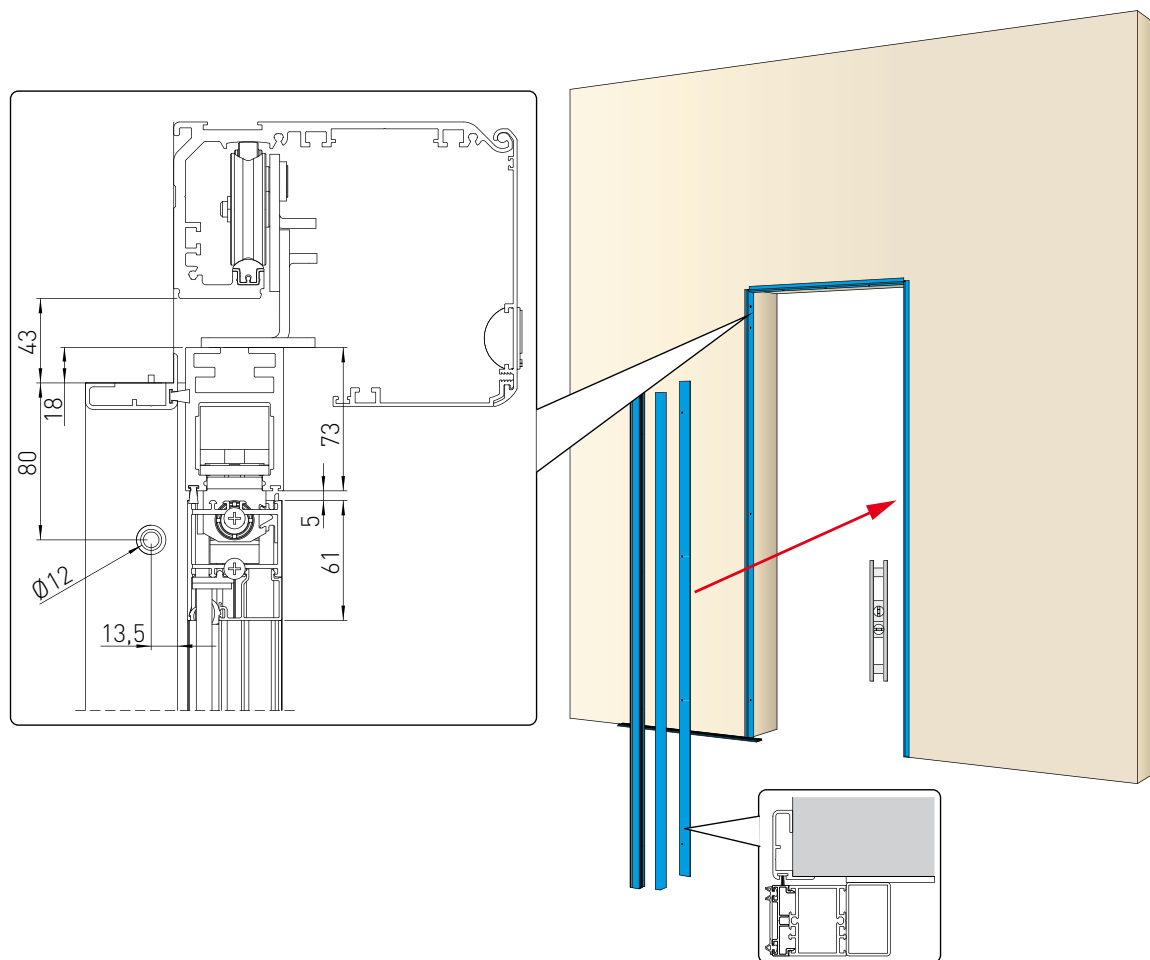


4

Installation of automation

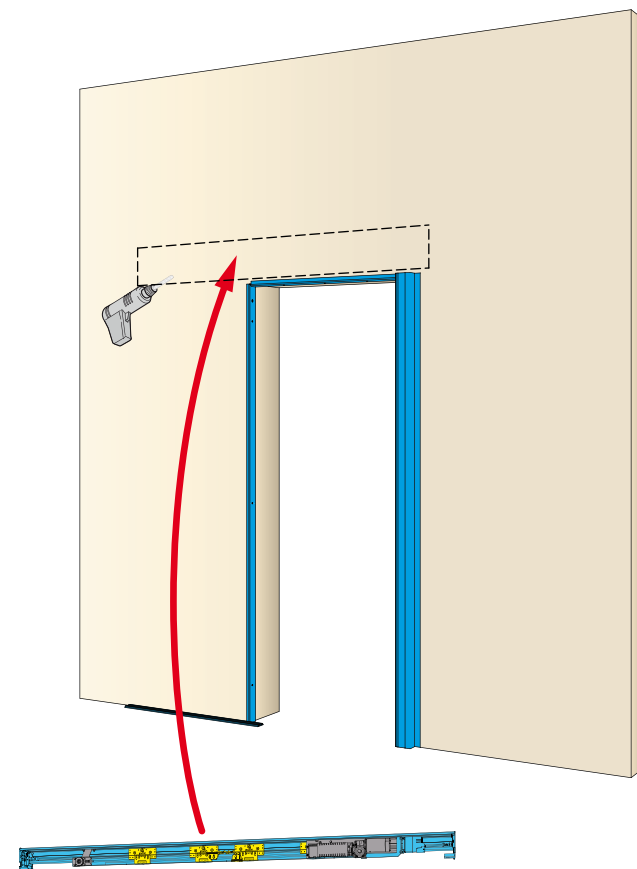


6. Installation instructions for one moving door wing SBO

5 Door wing installation

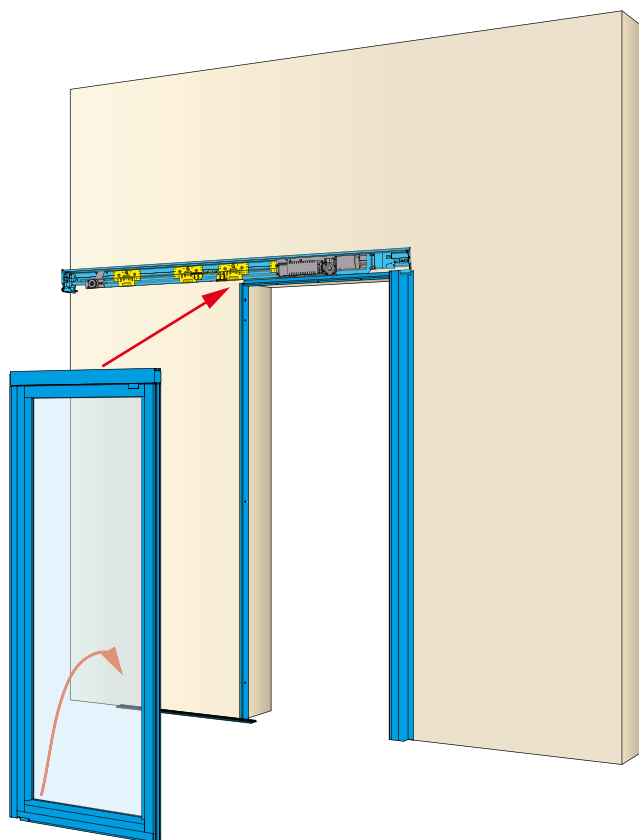

6 Casing and end of installation

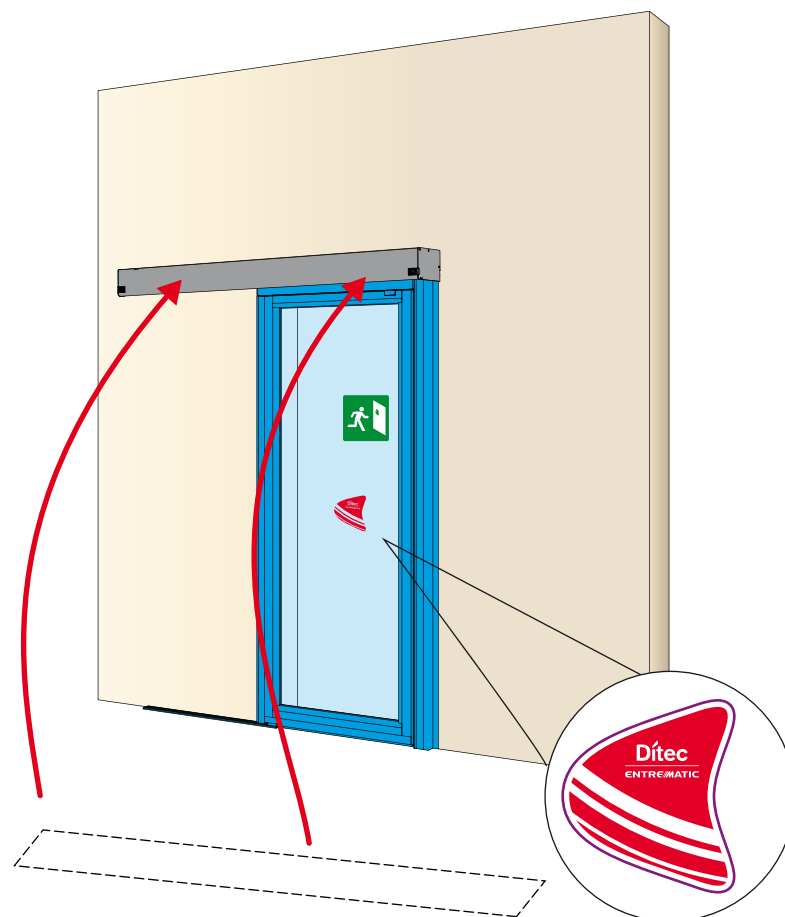

NOTE 1
see page 10

NOTE 1: in compliance with the EN 16005 Standard, transparent glass panels must be marked. The application of stickers complies with the provisions of the Standard regarding accident prevention.

ENTRE//MATIC

Entrematic Group AB
Lodjursgatan 10
SE-261 44, Landskrona
Sweden
www.ditecentrematic.com

